DOMO

User’ s Manual

Dimension(mm): 1060x1020x2000 Wood material: Red Cedar

DOMO

Catalog

Prologue ---- 1
Safety need attention ---- 1
Installation prepared ---- 1
Power parameter ---- 1
Installation tools ---- 2
Parts list ---- 2
Assembly instruction ---- 3
Circuit diagram ---- 5
Control panel & MP3 description ---- 6
Operating instruction ---- 7
Troubleshooting ---- 9
Cabin use & maintain ---- 10

Prologue

Thank you for you selecting our company infrared sauna products. This manual applies to IR2222 Product. In order to you can use it safely and effectively, please read this manual and please note the following matters before use:

1) Select this series of products, we will provide you with high quality guarantee service. In order to ensure your interest,please read the instructions carefully. If need any other service, please contact us or the product distributors.
2) We will not be in charge of the damage caused by your incorrect installation not according to the manual of the procedures to operate,
3) In order to make the series of products to achieve best use effect, we suggest you use the company's original accessories

Safety need attention

1, the product of electrical installation debugging, must by qualified electrician professional or dealers assigned professional personnel.
2, the product of the power supply facilities connecting must comply with the national safety standards,the power supply voltage and frequency should be consistent with this product (page 1 electrical parameters),Must be installed in leakage protection switch and over current protection, overload fuse, etc, to ensure that circuit device above effective protection device.
3, During installation and use, it is strictly prohibited to cut its connection wires. Don't apart the main controller and control panel, otherwise, the result of product fault or leakage, electric shock accidents and so on, the company shall not be liable for all responsibility.
4, Regarding the product storage, don't put the cart before the horse, oblique, in debris piled up. gentle handling. Prevent stress, strong vibration, and collisions.
5, when not in use product,please keep the surrounding environment ventilated, dry, and power off.
6, Laypeople do not operate installation, if discover the power cord with damaged or product quality problem, please ask professional personnel to fix.
7, Before each use, please attempt to experiment leakage protector.
8, Connecting wire privately is prohibited.
9, children must be companied with parents to use products.

Installation prepared

1) Before installation , please confirm your installation place is ready to power supply and installed leakage circuit breaker.
2) The products using integrated assemble technologies, the parts are already assembled and tested before leaving the factory . Before the backout product packaging, Please check product type, specification and configuration and whether you ordered that product.
3) After unpacking, please check carefully product fittings is complete, if it is in transportation is injured. If you have any question, Please contact us or the product distributors.
4) The ground or build by laying bricks or stones will inherit a room body and the full weight of the user, please confirm your installation place is enough strength.

Power parameter

	Power		Heater power/Q`ty		Total heater power		Infrared sauna benefits
Heater	Voltage	Freguency		400W	Rated power	Current	detoxifi cation, beatiful skin, weight loss, flexibility, cardiovascular health, pain relief, stress relief/relaxation
	AC230V	50/60Hz		4pcs	1600W	7A	
Stove							

Installation tools

Pencil


Tape measure

Cutter

Spirit level

Straight screwdriver

Cross screwdriver

Aiguille

Dower drill screwdriver

Double ladder

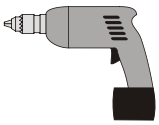
Power drill

Parts list

1	Top panel	1
2	Back panel	1
3	Side panel	2
4	Back Guardrail	1
5	Side Guardrail	2
6	Wooden Handle	1
7	Front panel	1
8	Floor panel	1
9	Bench support panel	1
10	Bench surface panel	1
11	Corner profile	4

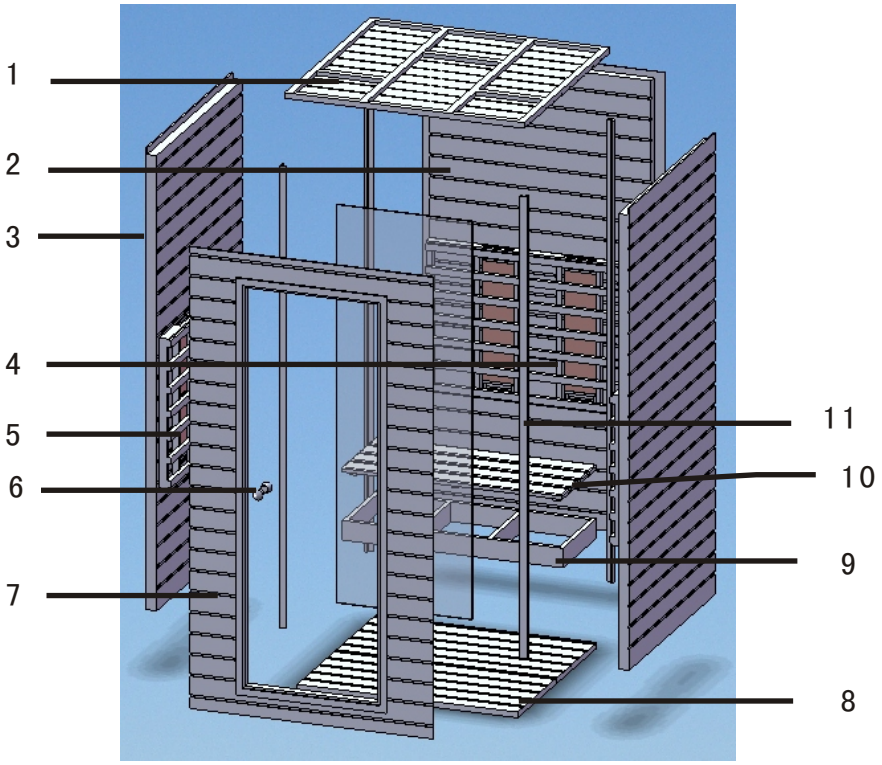

Assembly instruction

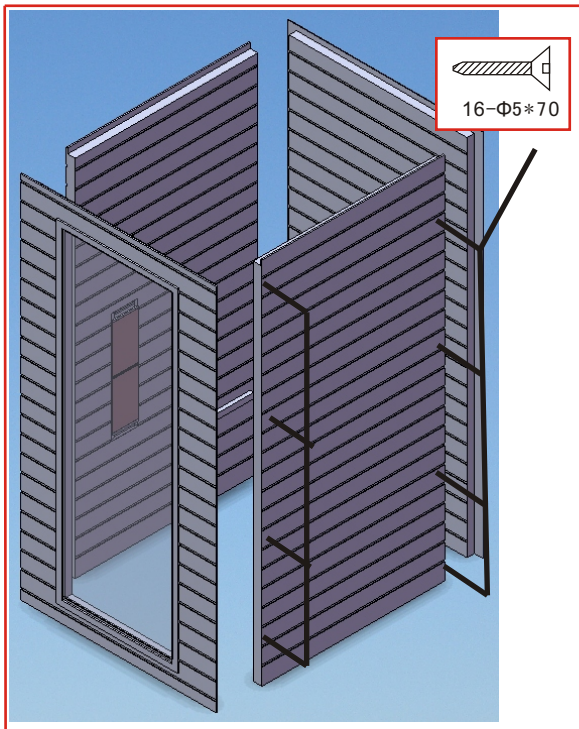

Lift back panel and one of side panels, assemble the side panel to back panel with 4pcs 5*70 screws; Proceed in the same way for the second side panel. Lift front panel and assemble the side panels to it with 4 pcs 5*70 screws.

①

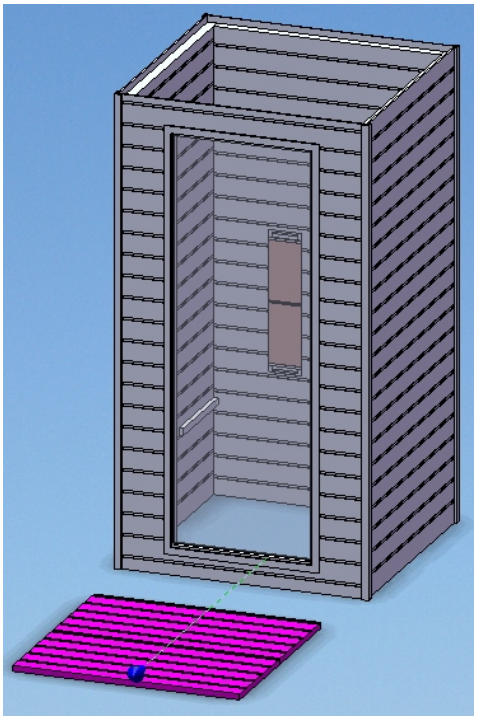

Place floor panel on the floor and check that it is lying flat

②

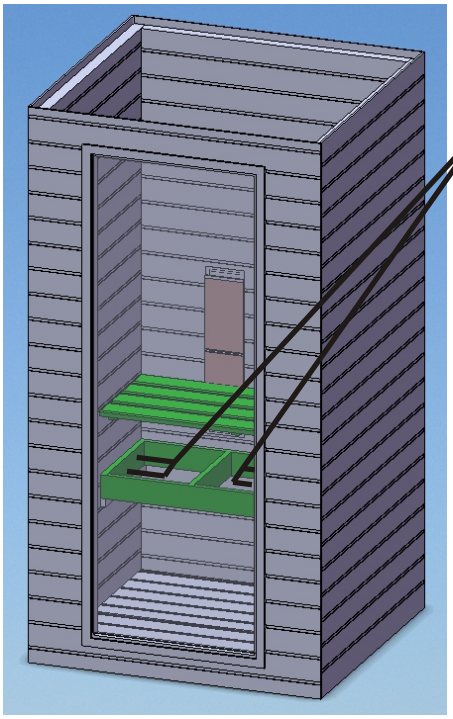

Assemble bench support panel to side panels with 4pcs 4*40 screws, then place bench surface panel.

③

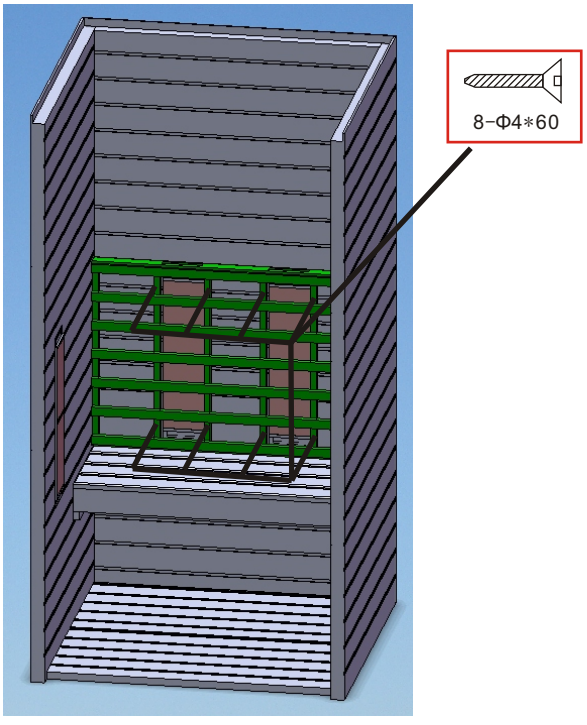

Assemble back guardrail to back radiators with 8pcs 4*60 screws. (Distance from bench surface panel about 20mm)

④

Assembly instruction

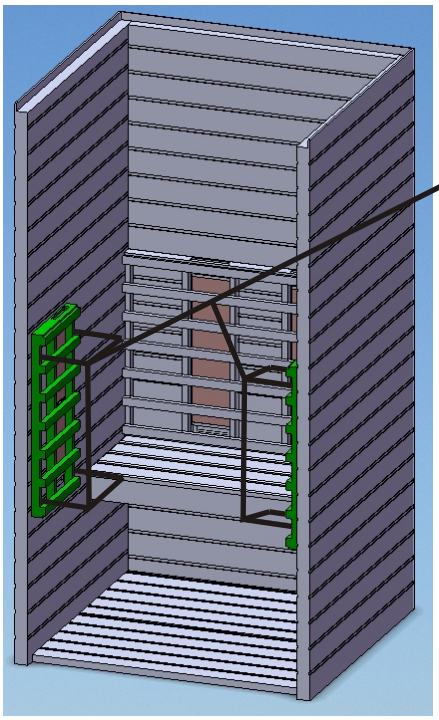

Assemble side guardrail to side radiator with 4pcs 4*60 screws. Proceed in the same way for the second side guardrail

⑤

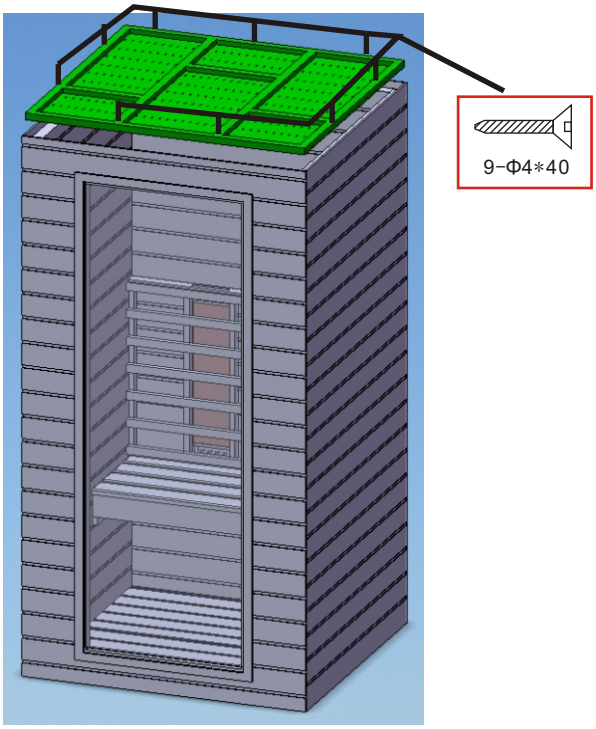

Assemble top panel from above to the back panel, side panels and front panel with 9pcs 4*40 screws

⑥

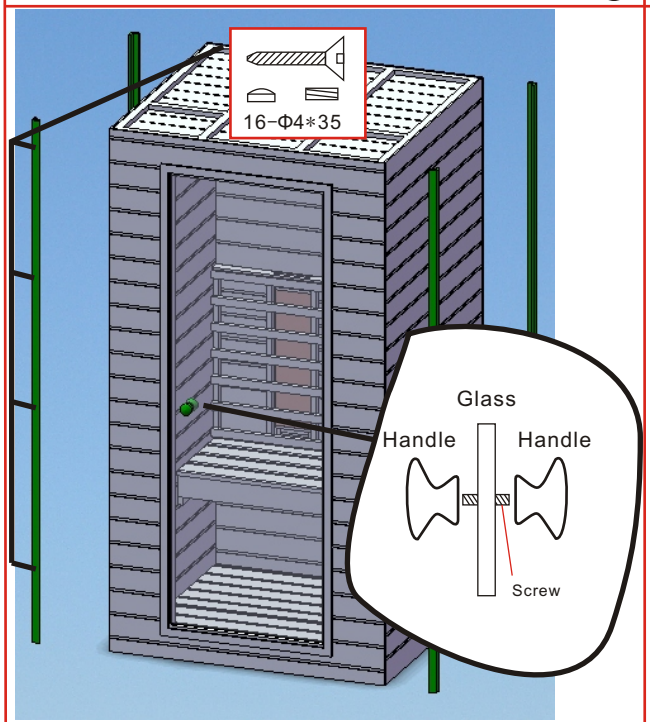

Assemble 4pcs corner profiles to the four corners of the cabin with 16 pcs 4*35 screws, then Install wooden handle to the glass door as shown in the illustration..

⑦

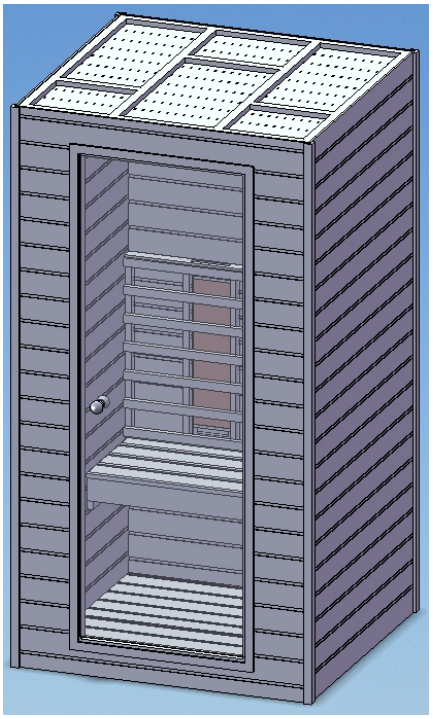

Plug all connectors to the control box (on the roof), then finish the installation.

⑧

Circuit diagram

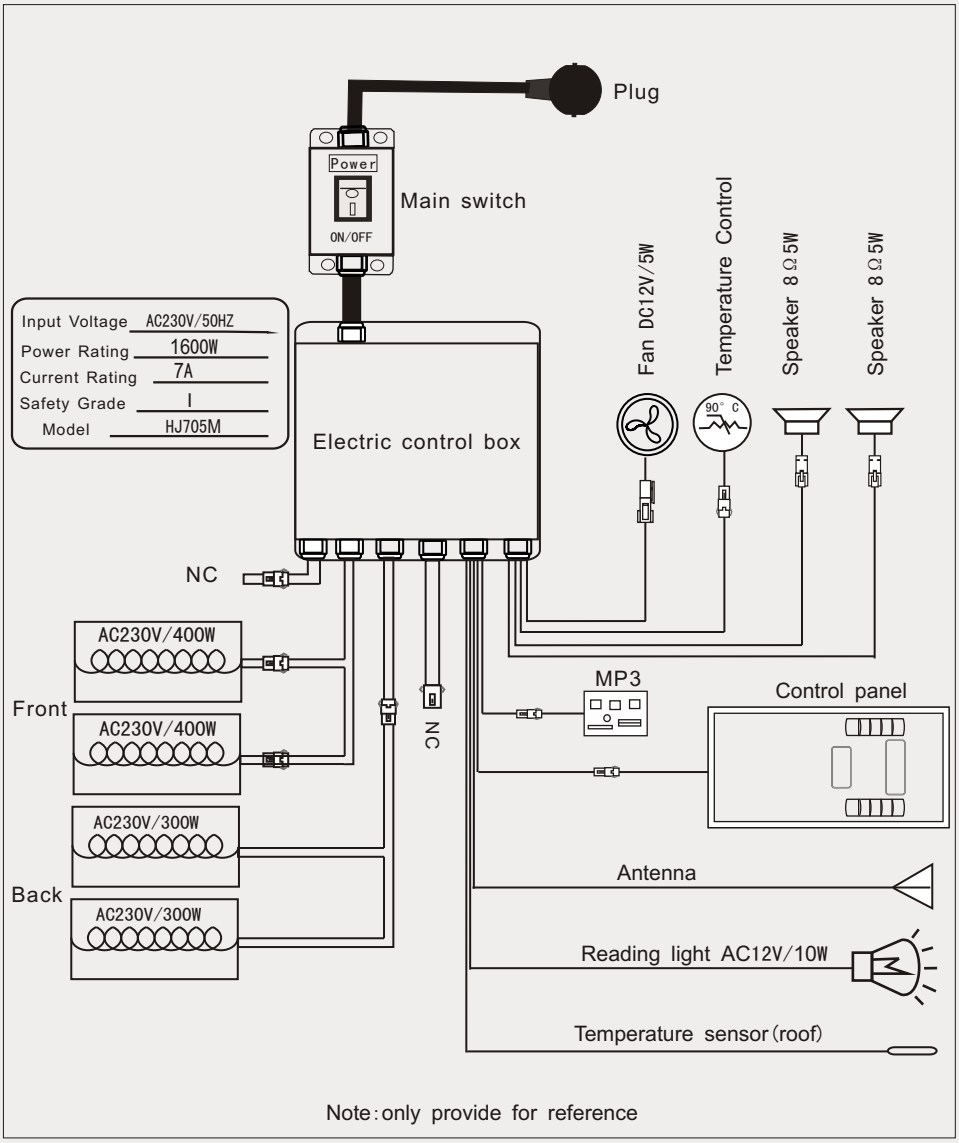

Control panel & MP3 description

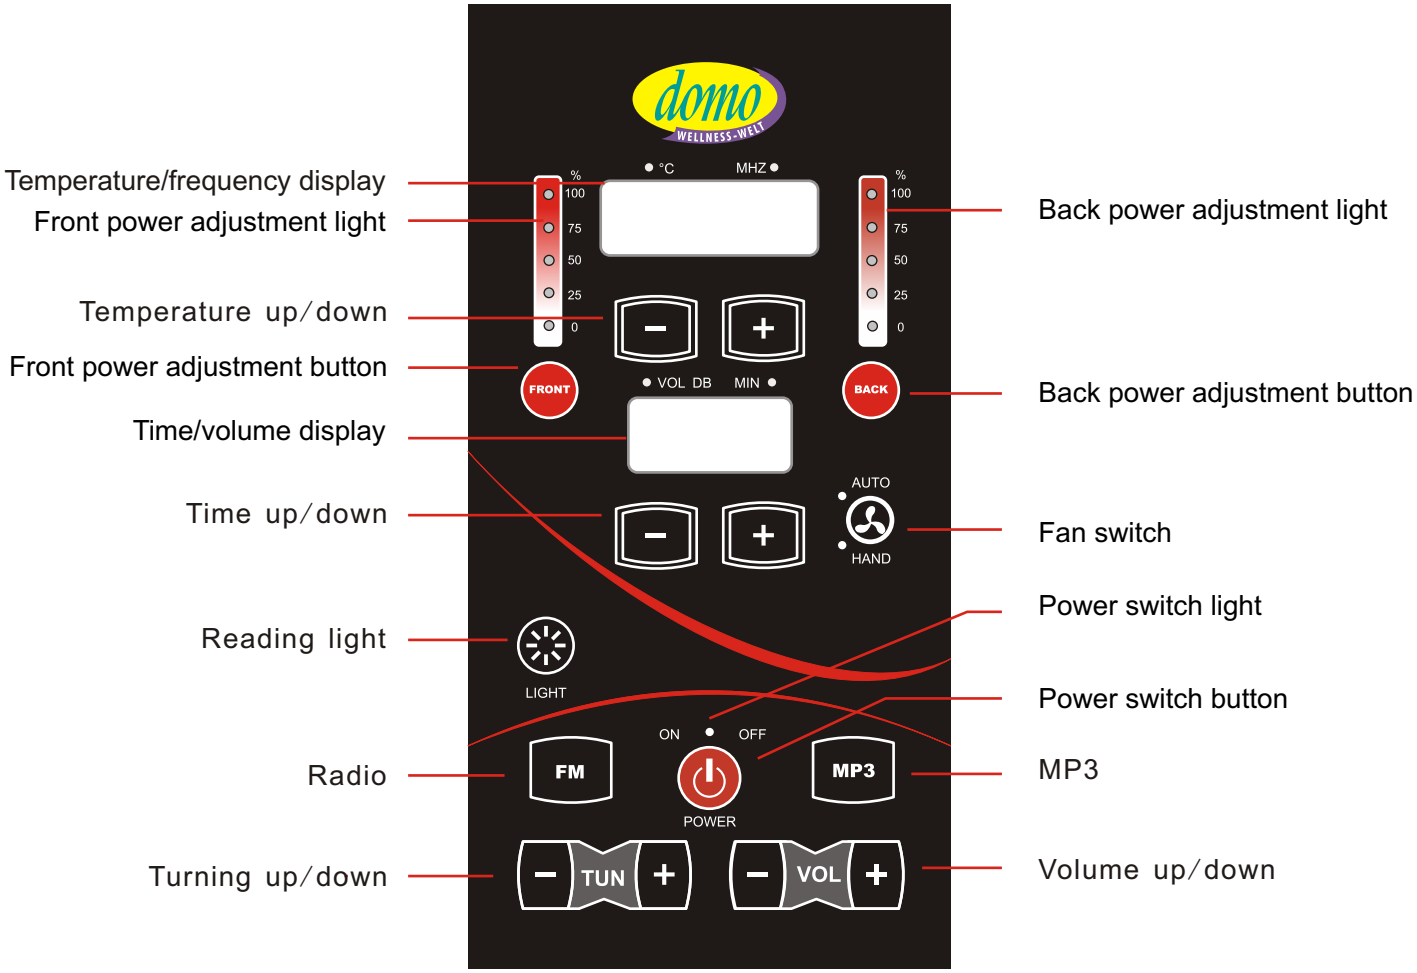

MP3

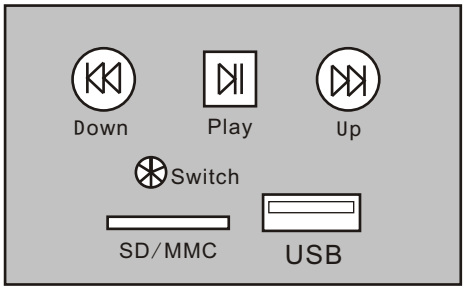

Operating instruction

1)Start-up

Turn on the main switch on the roof of the cabin, the power switch light on the display begins to blink. Now it is possible for you to switch on the infrared radiators, the reading light and the music function. Press ( ) to switch on the control panel, the back/front infrared radiators begin to work and their power adjustment lights are automatically set to the 100% intensity.

2)Intensity adjustment

Press (Front) or (Back) to adjust the power intensity of the front/back radiators separately by changing the gears: 100%-75%-50%-25%-0% .

3)Temperature settings

The upper display refers to control of the set temperature and also indicates the air temperature inside the cabin.Press(−) or (+) to adjust the desired temperature.This is done with 1-degree intervals. When the air temperature reaches to the desired temperature, the radiators will stop to work automatically; When the air temperature reaches 2 ℃ less than the desired temperature, the radiators will work again automatically.(default is 40 celsius)

Note: The maximum achievable air temperature in the cabin may be less than the desired temperature, this may be due to a number of reasons, such as the temperature outside the cabin, incorrect ventilation, poor sealing work, or the wrong radiators for the size of the room, etc.

4)Time settings

The lower display refers to control of the set time and also indicates the countdown. Press (−) or (+) to adjust the desired time. This is done with 1-minuter intervals. After the desired time is set, the number indicated will begin to count down (6-minuter intervals, 10 times per minute). When the time reaches to '00,0' , the radiators will switch off automatically. (the set time range is 5mins to 99mins, default is 99mins)

5)Reading light

Press( ) to switch on or switch off the reading light.

6)Fan

There are three states: automatic、manual、close.

While the radiators are in operation, the fan is in the automatic state; When the air temperature reaches to the desired temperature, the fan will work automatically; When the cabin temperature lowers the desired temperature, the fan will switch off; Press( ) to change to the manual state, the Fan hand light is on and the fan will keep running till press( ) again to close it.

7)FM radio

Press(FM) to activate the FM system, then you can press (− TUN +) to adjust the frequency. This is done with 0.1-MHZ intervals. Hold down the button for 3 seco nds to search the channel automatically, its reception range is 87.5MHZ－108MHZ. Press(− VOL +) to adjust the volume, its range is 0-8 levels.

8)MP3

Press(MP3) to activate the MP3 system, the music player begins to work, prior for USB slot data. If you press ( ) button on the player, the input data can be switch between USB slot and SD slot. By pressing ( ) or ( ) to select the songs, hold down the button for 3 seconds to adjust the volume;Alternatively,you can press the (− VOL +) on the control panel to adjust the MP3 volume. If you press ( ), the music will stop playing, press again it will switch on.

ATTENTION:

1)Read all instructions before using this appliance;

2)Use this appliance must be installed in leakage protection switch and over current protection,overload fuse,etc,to ensure that circuit device above effective protection device.

3)Connect the power cord to a properly grounded outlet only.

4)Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, please ask professional personnel to fix.

Troubleshooting

Symptom	Possible causes	Possible solutions
Control panel does not operate	Power is turned off No electrical power to the cabin	Turn on or reset the circuit breaker. If this does not solve the problem,have a qualified electrician check the electrical service.
	The fuse, depening on the electric control box, has blown	Replace a new fuse
	Control panle is defective	Replace a new control panel
Control panel no message on display	Improper wiring to control panel is defective	Consult with a qualified electrician
	Control panel is defective	Replace a new control panel
Reading light does not work	No electrical power to the light	Consult with a qualified electrician
	Reading light has burned out	Replace a new light
Fan does not work	No electrical power to the fan	Consult with a qualified electrician
	Fan is defective	Replace a new fan
	Obstacle is in the fan	Clean the fan
Radiators do not work	No electrical power to the radiators	Consult with a qualified electrician
	The display appears “Err”	Inspect the connections of the temperature sensor
	The fuse, depening on the electric control box, has blown	Replace a new fuse
FM radio does not work	No electrical power to the radio	Consult with a qualified electrician
	frequency or volume not correct	Press TUN to serch channels, press VOL to adjust voice
	No signal or weak signal	Put receiving antenna to different angles, reset channels

Cabin use & maintain

1, Infrared cabin should be installed in ventilated place, and avoid direct sunshine.

2. Avoid infrared cabin hit with other objects

3. Before touch the room, please keep your hands clean, no moisture and sweat, Lest wood surface black or become dirty.

4, The room inside metal, such as chrome accessories do not blow row, prevent metal corrosion

5, During control panel of touch screens use, please use 30-100 grams of pressure, please do not stress and use other items knock touch scrren surface.

6, If long time not use this product, please regularly start control system and heating system, For room body dry processing, lest room body wood moldy.

7, If wood surface appear mildew point or black spots, please use 800# emery cloth grind black site.

8, If stain steel parts or chromed plastic surface of scratch appear rust corrosion , please use alcohol swab it.

9, Please tighten the screws of the bench support panels once every three months, avoid the loose or dropping off.